



9.2 DIAGRAMS

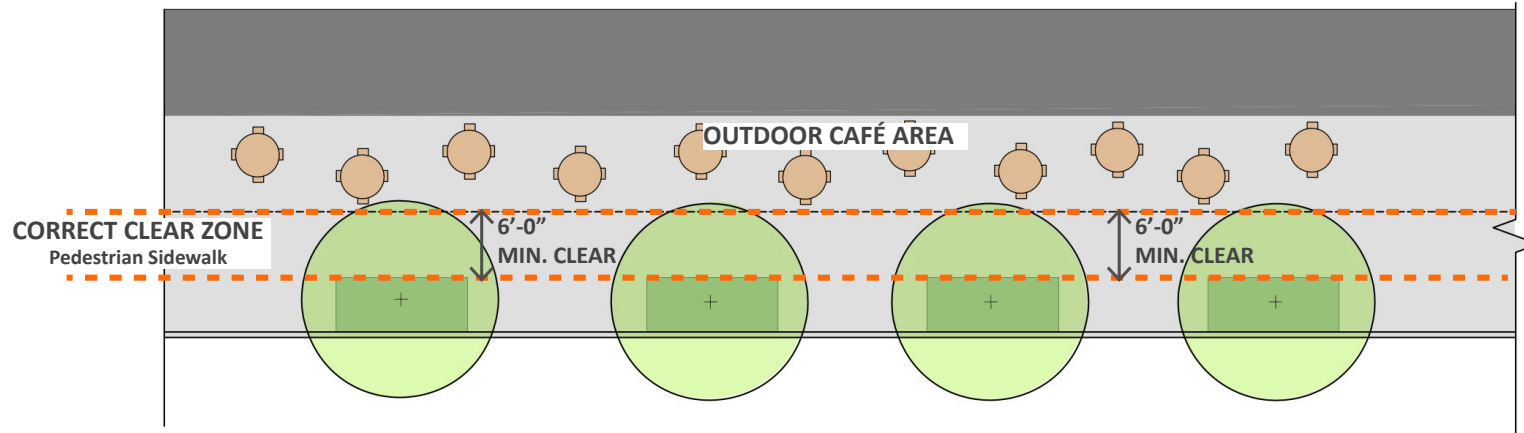

The Clear Zone is measured in a consistently straight path from the closest obstructions on both sides. Six feet minimum must be left clear for pedestrians. Site Plan Conditions or Sector Plans may call for a wider clear zone.

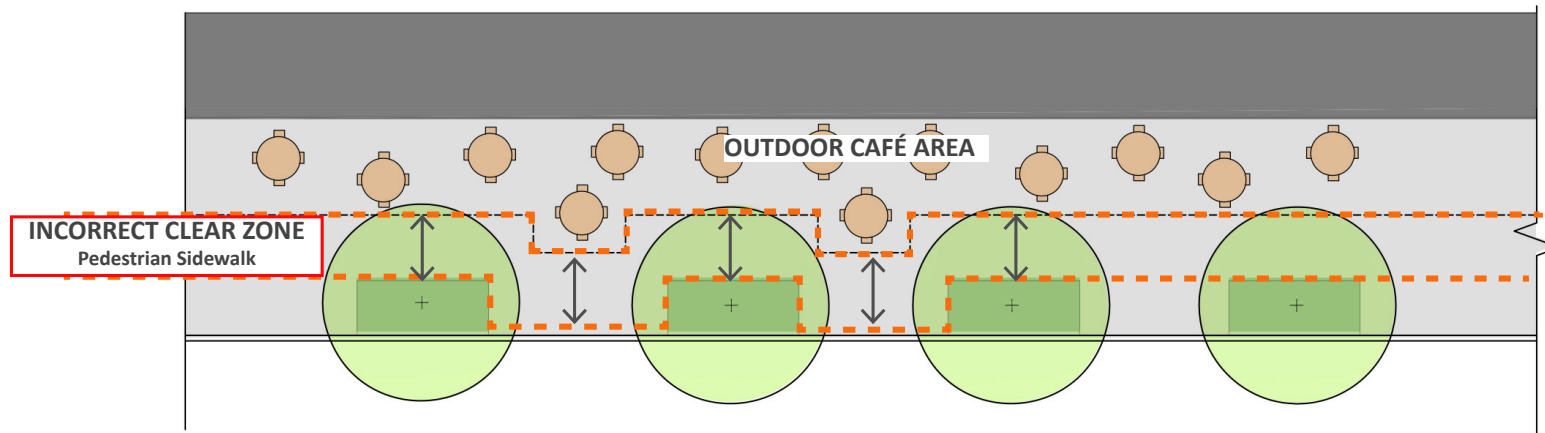

The Clear Zone must be a straight path. The Clear Zone cannot zigzag or be measured from varied obstruction points along the pedestrian path.